

# User Manual




# L1 Support

## L1 Introduction

### L1

- 1.Status Light
- 2.Microphone
- 3.Camera
- 4.Touchpad
- 5.A(🍏Apple) Button
- 6.B(🍌Banana) Button
- 7.Corner Lights
- 8.Trust Light

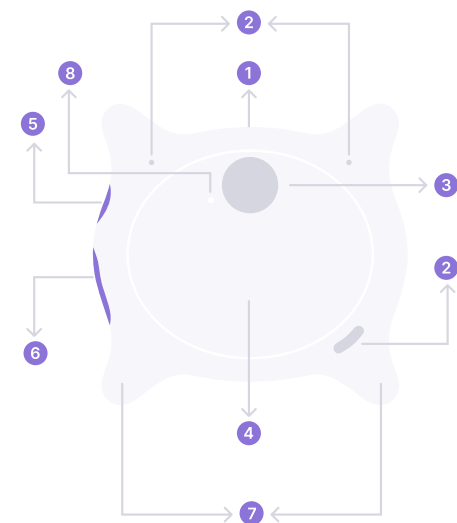

- 1.Acoustic Vent
- 2.Charging Point



### Magnetic Lanyard

- 1.Charging Point
- 2.USB-C Port



### Packing List

Looki L1, Magnetic Lanyard, Charging Cable, Quick Guide, Safety Information

## First Use

Before using the L1, please download the 'Looki' app from the App Store or Google Play, or simply scan the QR code below to download it directly.



Follow the instructions in the Looki app to complete device setup.

## Power On / Off


### Power On

Press and hold the B Button until the Corner Lights turn on.

### Power Off

Press and hold both the A Button and the B Button until the Corner Lights flash in an alternating yellow breathing effect.

*\* When charging, the L1 will automatically power on.*

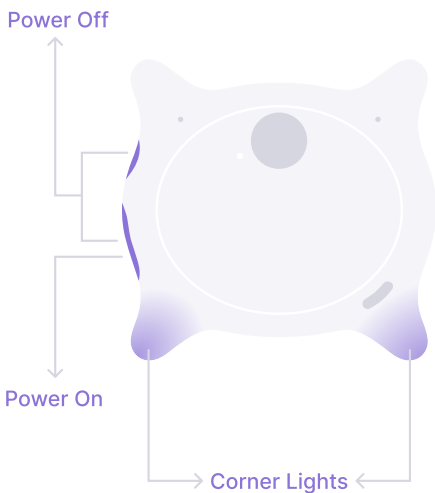

# Charging

Attach Looki L1 to the included Magnetic Lanyard, L1 can be charged via the USB-C port on the bottom of the Magnetic Lanyard.

It is recommended to use the official Type-C cable included in the package for charging.

When charging, the Corner Lights will flash twice. And the color indicates the current battery level.

- Low battery
  - the light breathes red
- Medium battery
  - the light breathes orange
- High battery
  - the light breathes green




# Operation and Features

## ● 📷 Photo Capture

Press once the B Button to take a photo.

## — 📷 Story Mode

Press and hold the B Button to start or stop Story Mode.

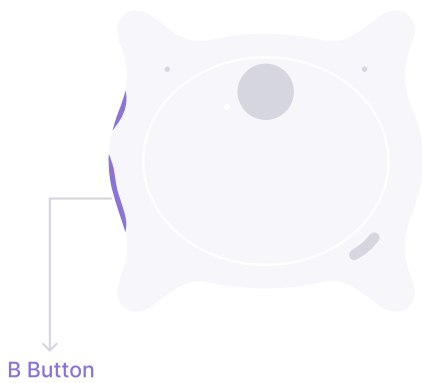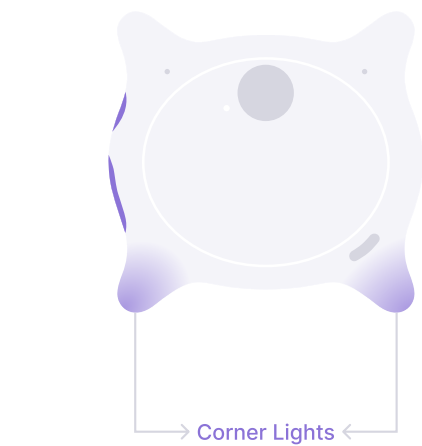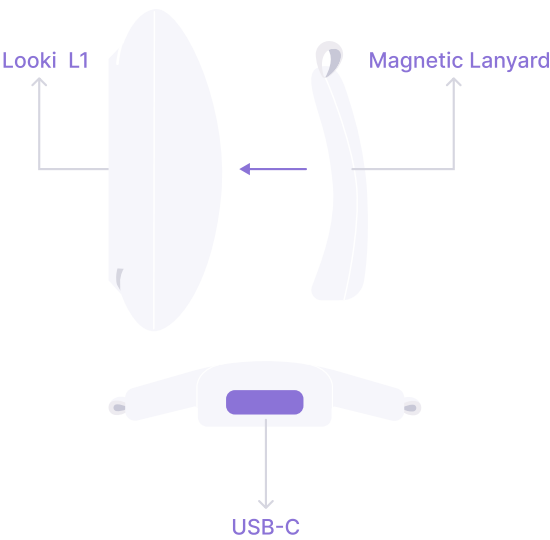

\* When Story Mode starts, the top Status Light continuously breathes green.

## ● 🎤 Recording

Press once the A Button to start or stop recording.

\* When recording starts, the top Status Light stays solid green.

## — 🎤 Audio Recording

Press and hold the A Button to start or stop audio recording.




\* When audio recording starts, the top Status Light stays solid red.

\* Button functions can be customized in the Looki App.

## — 🧠 AI Companion

Press and hold the Touchpad.

- When the Corner Lights show streaming colors, speak to the AI companion, then release the Touch Pad when done.
- When the Corner Lights breathe in streaming colors, the AI companion is processing.

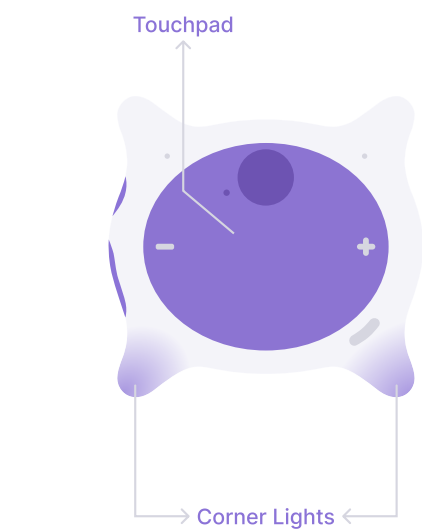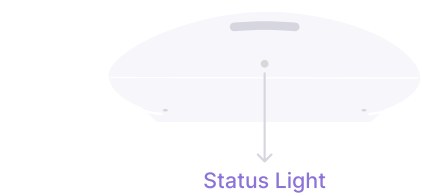
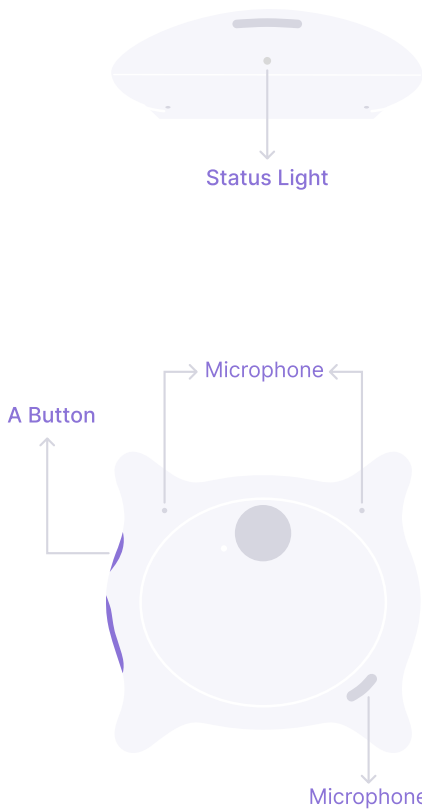


- When the Corner Lights turn solid white, the AI companion is responding.

While the companion is responding, swipe left or right on the Touchpad to adjust the volume.

During a conversation, you can double-tap the touchpad at any time to end it.


*\* The AI companion feature requires a Bluetooth connection to your phone and access to the internet.*

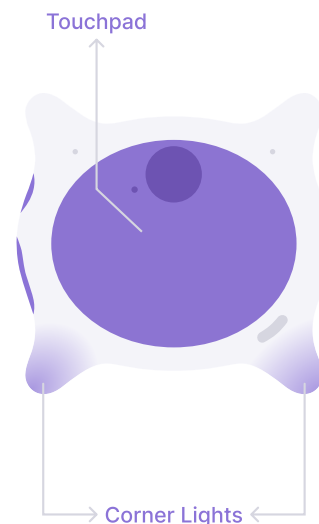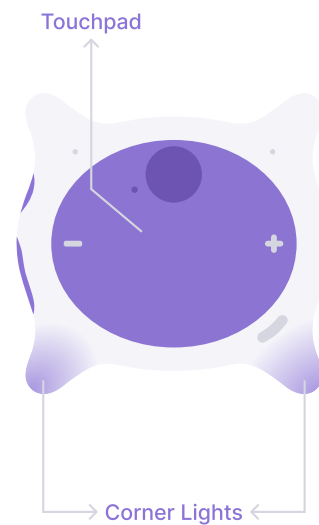

## Light Indicators


### Status Light

Story Mode - Continuously breathes green  
 Recording - Solid green  
 Audio Recording - Solid red

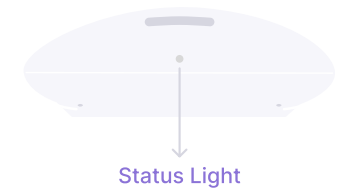

### Trust Light

The Trust Light turns on automatically during photo or video capture.

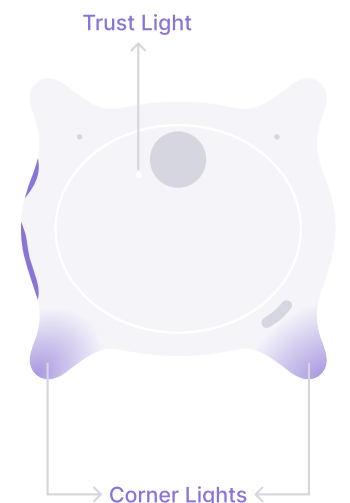

### Corner Lights

When the light alternately breathes yellow please wait.  
 When the light breathes red once please charge promptly.

*\* The Corner Lights will provide corresponding indications in other scenarios, such as charging or AI assistant.*

## Accessories

### Magnetic Lanyard

Attach Looki L1 to the included Magnetic Lanyard and wear it around your neck for regular use.

Looki L1 can be charged via the USB-C port on the bottom of the Magnetic Lanyard.

## ●● TapTap

Double-tap the Touchpad to check power and battery status via the Corner Lights.

- Low battery  
– the light breathes red
- Medium battery  
– the light breathes orange
- High battery  
– the light breathes green

When charging, the light breathes twice; when not charging, it breathes once.

*\* DO NOT magnetically attach the L1 through multiple layers of clothing; if needed, purchase the official accessory.*

**Lanyard stabilizer**

Attaching the lanyard stabilizer to the Magnetic Lanyard can improve video stability during movement.

**Specifications**

Dimensions	50.53*48.02*16.84 mm
Weight	<35g
Colors	Black, White, Green
Storage	32GB
Camera Resolution	12MP
FOV	109°
Aperture	F2.2
Lens	5P
Stabilization	Electronic image stabilization
Microphones	3 (Top, Bottom, Side)
Sensors	3-axis gyroscope, acceleration sensor
Bluetooth	5.2
Wi-Fi	2.4G/5G, 802.11 a/b/g/n/ac
Water & Dust Resistance	IP67
Battery Capacity	375mAh
Battery Type:	Li-polymer
Charging	Magnetic Base/Type-C
Charging time	1 hour 30 minutes
Battery Life	≥12 hours (typical)
Operating Temperature	0°C~35°C(32°F~95°F)

**Troubleshooting**

If you are unable to successfully connect to the L1 for an extended period, please try the following steps in order:

- 1 If your phone has previously paired with this L1, please ensure it is removed from your phone's Bluetooth list.
  - Go to your phone's Bluetooth settings.
  - Tap the info icon next to your Looki L1 from the list of devices.
  - Tap Forget This Device.
  - Return to the Looki app and Retry.
- 2 When both corner lights are flashing continuously, press and hold the A Button until the vibration alert is felt, then wait for the connection alert.
- 3 Try restarting the L1.
  - To power off, press and hold both the A Button and the B Button until the Corner Lights flash in an alternating yellow breathing effect.
  - After the corner lights have fully gone out for 5 seconds, press and hold the B Button until the Corner Lights turn on. Then return to the previous page and try again.
- 4 Go to your phone's Bluetooth settings. Turn off the Bluetooth, wait 2 seconds, turn it back on, then return to the Looki app and try again.